


Installation of **Motorcycle[®] Pass[™]** to Windshield or Handle Bars

Note: If swapping Transponder (e.g. I-pass, EZ-Pass, etc.) from another motorized vehicle, adjustment to the existing hook and loop product placement may be required.


Using the Motorcycle Pass[™] Assembly Kit :

1.) Inspect contents. Package should include the following:


- Two (2) Lock Washers
- One (1) Round Spacer
- One (1) 1/4-20 Button Head bolt
- One (1) M6 Button Head bolt

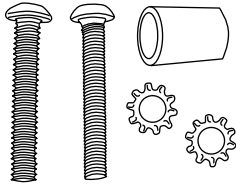


2.) Carefully unscrew the upper bolt already in place on your motorcycle handlebar.

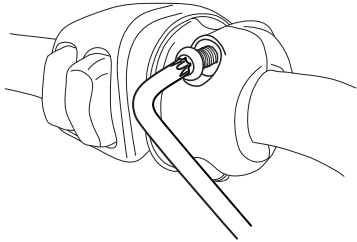

3.) Choose the bolt which is appropriate for your model of motorcycle. Arrange the parts as detailed below and carefully attach into the now-empty upper bolt space on your motorcycle handlebar.

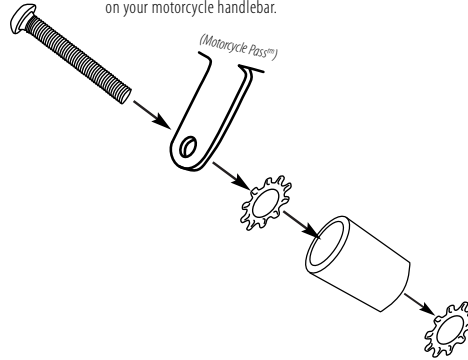


4.) Ensure that all parts are securely attached to your handle.



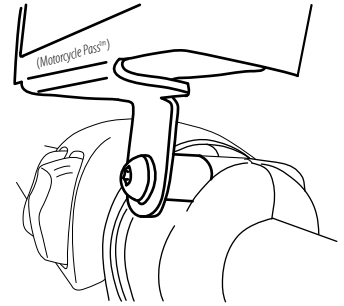


Windshield Mount

Remove existing hardware from windshield frame (interior)




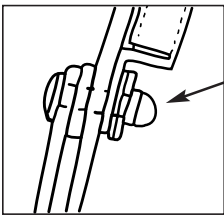


Place Motorcycle Pass[™] between windshield on Back Side of Windshield and Replace Hardware

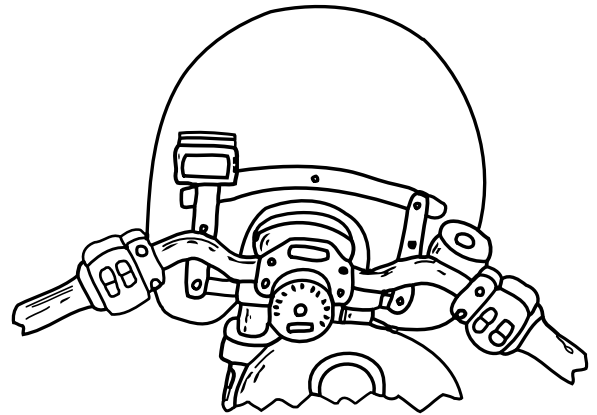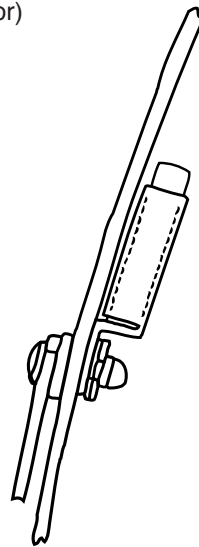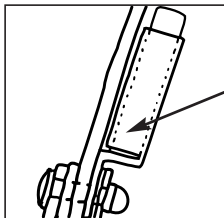

Using a P-clamp (not supplied) :

"P" style mounting bracket

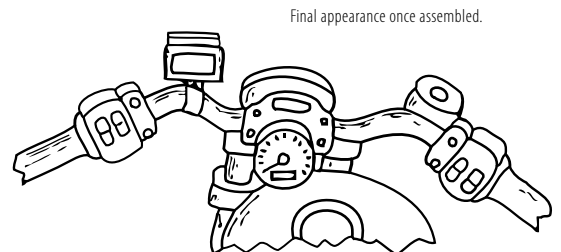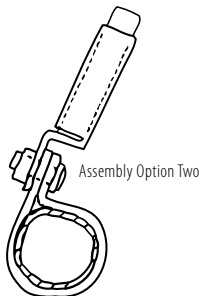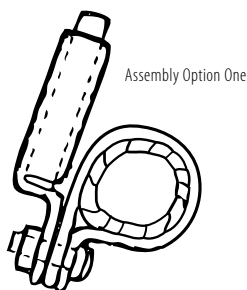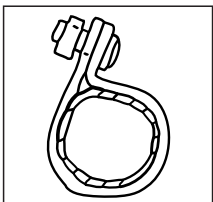

Final appearance once assembled.